

Assembly Instruction Sheet #IS-SQR1504RK For Style SQR1504RK

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) A 19 Medium Base Bulb 100W Maximum or

(1) Medium Base Vintage bulbs are recommended but not supplied.

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Marnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

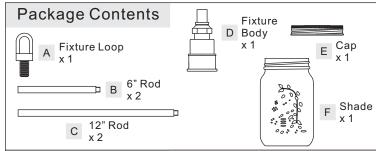

Hardware Contents

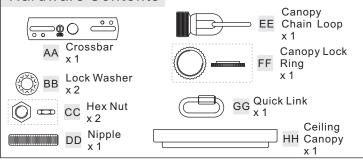


STEP 1 - Assemble the Rods and the Fixture Loop

A. Determine the Rods (B/C) to be assembled to the Fixture Body (D) according to your hanging height.


B. Pass the supply wires and ground wire through the chosen rods (B/C) and the Fixture Loop (A). Thread the Fixture Body (D), the chosen Rods (B/C) and the Fixture Loop (A) together. Hand tighten until snug.

Suggested rods for Ceiling height: 8' ceiling: use (2) 12" rods
9' ceiling: use (2) 6" rods and (2)
12" rods

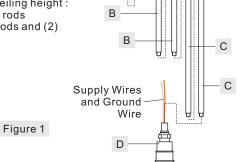

STEP 2 - Install Crossbar

 A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.



STEP 3 - Install Canopy Chain Loop and Nipple

* Pliers is required for this step.

A. Thread one Hex Nut (CC) to one end of the Nipple (DD) until it is at least 0.25" from the end. Pass one Lock Washer (BB) over the end of the Nipple (DD) and thread the Canopy Chain Loop (EE) onto the Nipple (DD). By using pliers, thread the Hex Nut (CC) against the Canopy Chain Loop (EE) and hand tighten until snug.

B. Thread another Hex Nut (CC) to the middle of the Nipple (DD). Place another Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the Crossbar (AA).

C. Remove the Canopy Lock Ring (FF) from the Canopy Chain Loop

(EE). Place the Ceiling
Canopy (HH) over the
Canopy Chain Loop (EE)
against the ceiling to
determine the correct
position of the Nipple (DD).
Thread the Canopy Lock
Ring onto the Canopy
Chain Loop (EE). Adjust
the Nipple (DD) to allow the
Ceiling Canopy (HH) to rest
against the ceiling when
held in place by the Canopy
Lock Ring (FF).

D. Remove the Canopy Lock Ring (FF) and the Ceiling Canopy (HH). Tighten the Hex Nut (CC) against the Crossbar (AA) to secure in place.

eiling
of the
op (EE)
goto
rect
ople (DD).
by Lock
opy
Adjust
allow the
HH) to rest
gowhen
lee Canopy
opy Lock
Ceiling
hten the
inst the
secure in


Figure 3

FF

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

STEP 4 - Install Fixture Chain and **Ceiling Canopy**


- A. Pull the supply wires through the Canopy Lock Ring (FF) and the Ceiling Canopy (HH) in order.
- B. Connect the Fixture Loop (A) to Canopy Chain Loop (EE) by using the Quick Link (GG). The fixture will hang safety now. Close the Quick Link (GG).
- C. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.
- D. Refer to Step 5 for wire connections.
- E. Raise the Ceiling Canopy (HH) and Canopy Lock Ring (FF) up the Quick Link (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight.

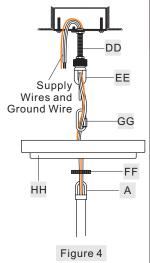

STEP 5 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.

 
Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.



STEP 6 - Install Bulb

A. Insert bulb onto socket and screw snugly into place.

 Your fixture is now assembled and ready to use. Enjoy!




Installation Optional Shade

- A. Remove Socket Collar from Fixture Body (D).
- B. Place Cap (E) over the Socket, secure by threading Socket Collar onto Socket. Hand tighten until sung.
- C. Insert bulb onto socket and screw snugly into place.
- D. Place the Optional Shade (F) over the bulb and thread it onto the Cap (E) properly.

Your fixture is now assembled and ready to use. Enjoy!

Figure 6

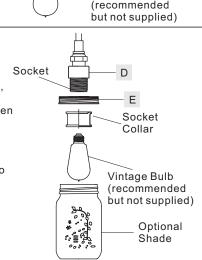

SQR1504RK FINISH: RUSTIC BLACK 5" Dia. 51.5" OVERALL **HEIGHT INCLUDES** SINGLE CHAIN. QUICK LINK, (2) 6" RODS AND (2) 12" RODS 9.75 6.5 4.25" Dia.

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com