


Assembly Instruction Sheet #IS-WKF1911EK_R1 For Style WKF1911EK

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (3) B10 Candelabra Base bulbs 60W Maximum or (3) Candelabra Base T8 Vintage bulbs are recommended but not supplied. Estimated Assembly Time: 20-30 minutes **Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. 🛆 Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Package Contents STEP 2 - Install Glass Panels Screw Ŷ A. Unscrew screws from the top edge Glass of the Cage (D) to remove glass Holder Fixture Loop Glass holder. x 1 С Panel B. Insert Glass Panels (C) into the slot x 4 in the bottom edge of the Cage (D). С Attach the glass holder onto the top edge of Glass Panels (C) and align holes on it to mounting holes on the Cage (D). Secure the glass holder with removed screws. Tighten gently until snug with screwdrivers. Fixture Body В Cage х 1 D x 1 D Figure 2 Hardware Contents Slot Crossbar ⊃⊈O AA Assembly x 1 BB Fixture Chain x 1 STEP 3 - Install Cage A. Remove lock screws from the CC Quick Link bottom edge of the fixture hood. B. Align the label "A" on the top edge x 1 В of the Cage (D) to the label "A" in Ceiling DD Canopy the bottom edge of the fixture Label "A" hood. Attach the Cage (D) with x 1 glass panels to the fixture hood and secure with removed lock STEP 1 - Install Fixture Loop screws. Hand tighten until snug with screwdrivers. A. Thread the Fixture Loop (A) onto the top center of the Fixture Body (B) and hand Label "A" tighten until snug. Lock Screw R D Figure 3 Figure 1 Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com Revised Date: 2017-12-22 © 2017 Quoizel Inc.

STEP 4 – Install the Crossbar Assembly to Outlet Box and Adjust the length of the Nipple

- A. Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included), tighten until snug.
- B. Adjust the hex nut and lock washer underside of the crossbar to the middle of the nipple.
- C. Remove the canopy lock ring from the canopy chain loop. Place the Ceiling Canopy (DD) over the canopy chain loop against the ceiling to determine the correct position of the nipple. Thread the canopy lock ring onto the canopy chain loop. Adjust the nipple to allow the Ceiling Canopy (DD) to rest against the ceiling when held in place by the canopy lock ring.
- D. Remove the canopy lock ring and the Ceiling Canopy (DD). Tighten the lock washer and the hex nut against the crossbar to secure in place.

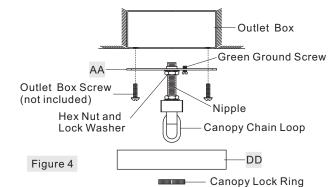

STEP 5 - Install the Fixture Chain and Ceiling Canopy

- A. Adjust the Fixture Chain (BB) to your desired length by removing links if needed. Put a cloth over the Fixture Chain (BB) to protect the finish.
- B. Pull the supply wires through the Fixture Chain (BB) alternating links. After the wires are through the Fixture Chain (BB), pull the Supply Wires and the Ground Wire through the canopy lock ring and the Ceiling Canopy (DD) in order.
- C. Attach one end of the Fixture Chain (BB) to the quick link on the fixture loop. Lift the fixture and Fixture Chain (BB) up and attach the other end of the Fixture Chain (BB) onto the canopy chain loop with the Quick Link (CC). The fixture will now hang safely.
- D. Feed the Supply Wires and Ground Wire through the canopy chain loop and nipple into the outlet box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.
- E. Go to Step 6 for wire connections Supply and follow the directions. Return Wires and to Step F in this step when Ground Wire complete with Step 6.
- F. Raise the Ceiling Canopy (DD) and canopy lock ring up the Fixture Chain (BB) and over the canopy chain loop. Tighten the canopy lock ring onto the canopy chain loop until tight.


 



Figure 5

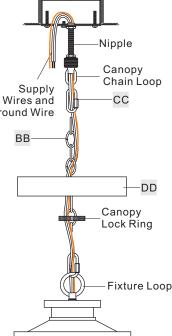

STEP 6 - Making the Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.


Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.

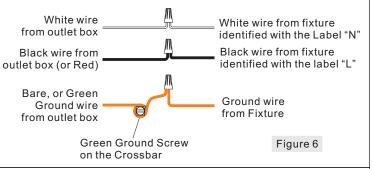

STEP 7 – Install Bulbs

A. Insert bulbs onto sockets and screw snugly into place.


Your fixture is now assembled and ready to use. Enjoy!

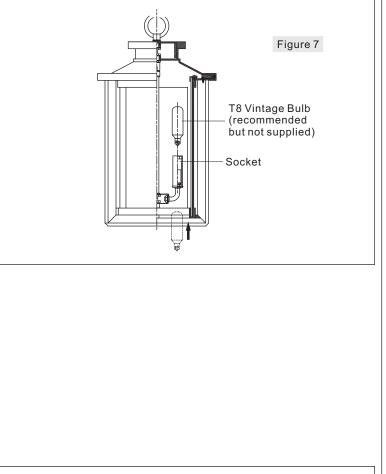

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

© 2017 Quoizel Inc.

Revised Date: 2017-12-22

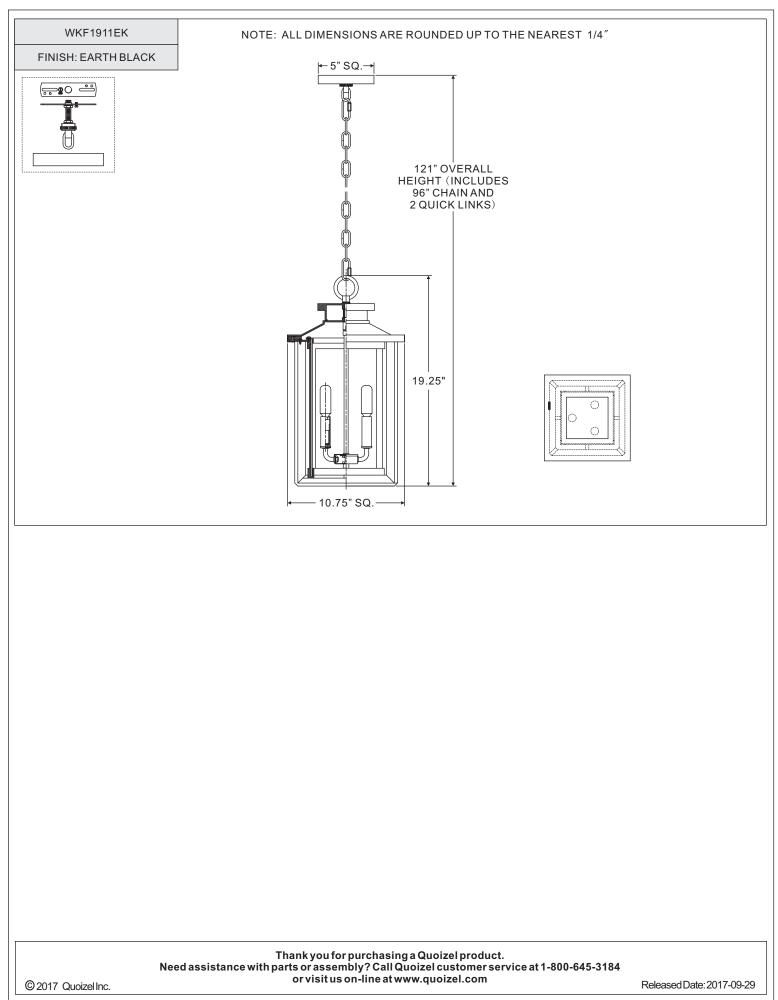

3of3