


Contemporary Lighting

PRODUCT NAME: Puffs

ITEM NUMBER: E21127-MW

Please consult your electrician for hanging fixture and wiring.

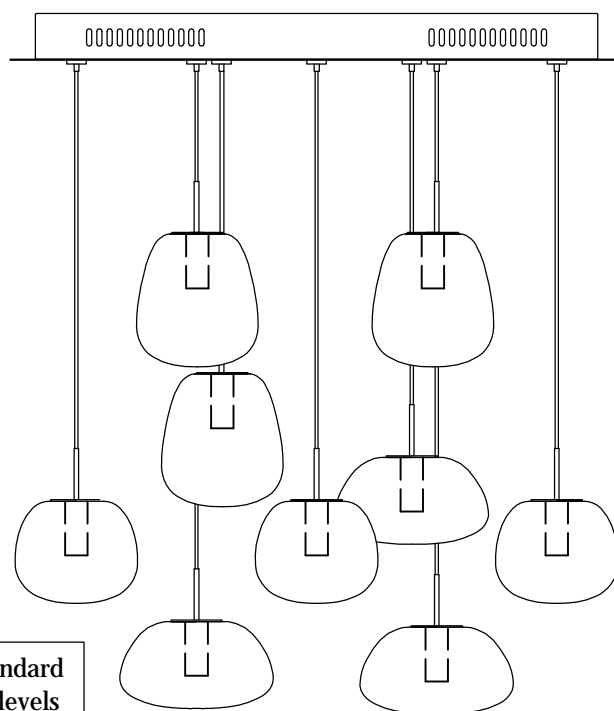

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.


Below is a list of recommended dimmers:

- Lutron MACL-153M
- Lutron DVL-153P
- Lutron SCL-153P
- Leviton IPL06-10Z
- Leviton 6674-POW

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

Warning! This fixture is supplied with an installed LED driver. Wires **MUST** be connected to driver found in canopy and **NOT DIRECTLY TO POWER SOURCE** or a short might occur.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

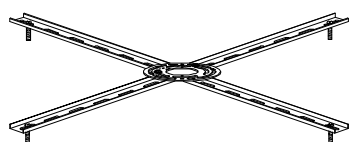


(A)
Mounting Bracket



(C)
Anchors





(E)
Finial



(F)
Glass


Locate all hardware & components before discarding packaging

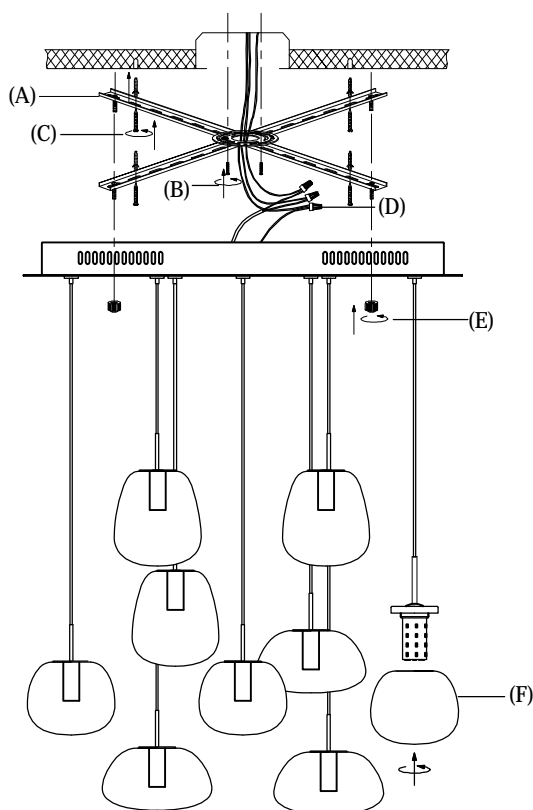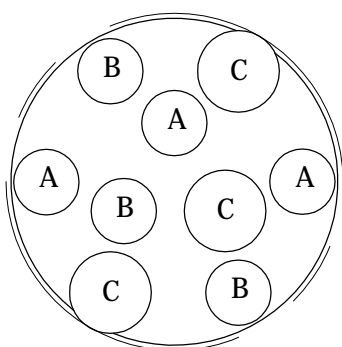

Cleaning & Care:


Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

1.)

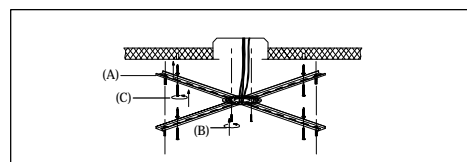


Step.1: Remove mounting bracket from fixture and install to electrical box using screws (D). Mark where screws at ends of bracket (A) meet the ceiling. Remove mounting bracket (A) from ceiling. Drill holes using $3/16" \pm$ drill bit where marked. Install mounting bracket (A) to outlet box by attaching anchors (C) to secure bracket at ends.

2.)




Step.2: Wire fixture to wires (D) in outlet box. Copper wire is for Ground.

3.)

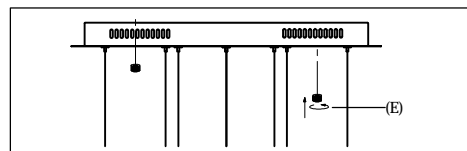

Step.3: Install fixture to bracket and tighten ball nuts (E) at the ends of the canopy to secure.

4.)


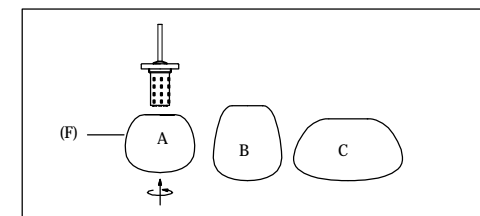


Step.4: Attach glass (F) by twisting into place (see diagram to the left for recommended arrangement)



**Contemporary
Lighting**

Model E21127-MW Glass Diagram

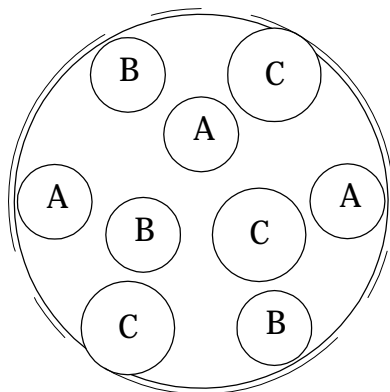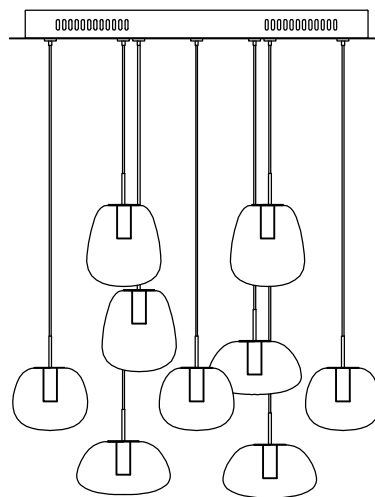

**A-3(W5.9" x H3.4")
EGLS21122-11**

**B-3(W4.7" x H4")
EGLS21120-11**

**C-3(W4.7" x H5.1")
EGLS21121-11**