




Diagram A

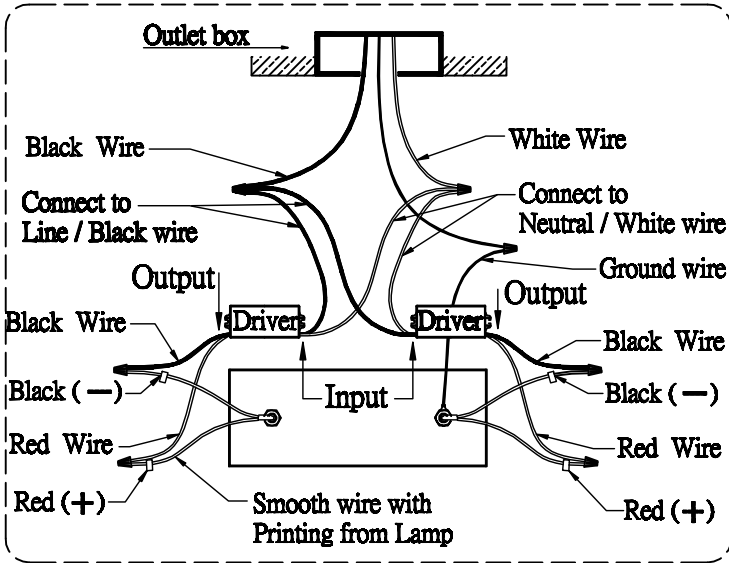

Turn off power at breaker for outlet fixtures is being installed to.

1. Install Crossbar Assembly to outlet box using Machine screw
2. Assemble the fixture per Diagram B.
3. Add 6" and 12" rod to the fixture to your desire height
4. Assemble the side Acrylic rods (K) to the side arms (I) of the fixture. Insert the Side Acrylic Rod (K) to the hole of the side arms (I) and secure with screw (J)
5. Repeat step 4 for all the arms
6. Assemble bottom acrylic rod assembly (P) to bottom of fixture. Bring out the wire (M) from the bottom of the fixture and connect it to the wire leads (N) from the Bottom Acrylic Assembly (P). Carefully tuck the wires back to the fixture and push the Bottom Acrylic Assembly (P) into the fixture until it is tight against the fixture.
7. Repeat step 6 for the second Bottom Acrylic Assembly (P)
8. Wire fixture assembly per Diagram A
9. Install fixture assembly to Crossbar assembly and secure with Hex Nut and finial per Diagram B

Diagram B

