




Contemporary Lighting

PRODUCT NAME: Opb II 5-Lights LED Pendant
ITEM NUMBER: E2426291PC

Please consult your electrician for hanging fixture and wiring.

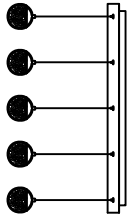

The fixture is designed to work with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

- Lutron MCL-153M
- Lutron DVL-153P
- Lutron SCL-153P
- Leviton PL06-10Z
- Leviton 6614-00W


Due to harsh current ratings, should not exceed 150watts of product for a 600 watt dimmer.

WARNING: Wires need to be connected to driver found in canopy and should not connect directly to power source or a short might occur.



LED 5 x 5W Bulbs

MADE IN CHINA
Page 1 of (2)

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation.

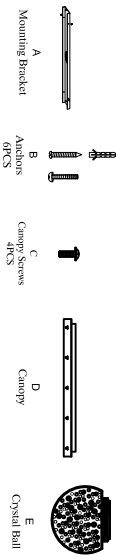


Loosen all hardware & components before disassembling packaging.

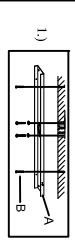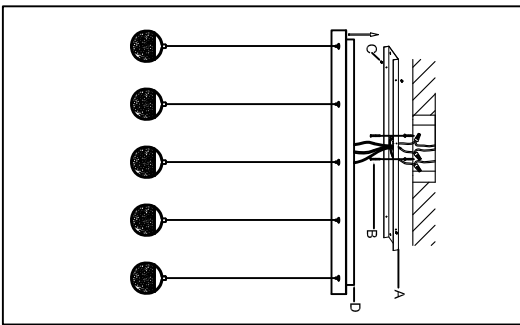

Step 1: Remove mounting bracket (A) from canopy (D) and drill holes using 3/16" drill bit. Mark the locations of the anchors (A) and screws (B) and secure bracket at ends.




Step 2: Wire fixture to wires in outlet box. Black wire is positive, white is neutral, bare wire is ground.

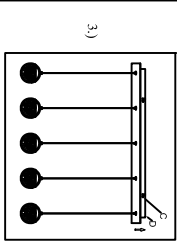

Step 3: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install canopy, use canopy screws (C).

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

Page 2 of (2)

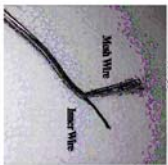


Pendant Wires	Driver Wires
Inner Wire (+)	Driver Red (+)
Outer Mesh (-)	Driver Black (-)

Step 4. If wires are cut in the process of adjusting the height, please note the pendants consist of an outer mesh wire(ground) and inner (Live) wire that must be separated before re-joining with the driver output wires. Pendants are wired in series to the driver, as shown below

HLU35017TD

HLU35017TD

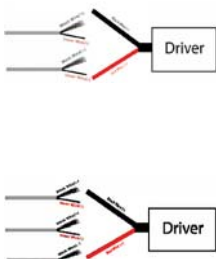

Page 3 of (3)