


CAUTION - RISK OF SHOCK - Disconnect Power at the main circuit breaker panel or main fuse box before starting and during the installation.

- Get item-A, mounting hardware and find the appropriate 1) threaded holes on mounting strap. Assemble mounting crews into threaded holes.
- Attach mounting strap to outlet box with the two (2) strap 2) mounting screws.. Mounting strap can be adjusted to suit position of fixture.
- Grounding instructions: (See Illus. A or B)
  On fixtures where mounting strap is provided with a hole and two raise dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
- B) On fixtures where a cupped washer is provided. Put ground wire from outlet box under cupped washer and green ground screw and thread screw into hole in mounting strap.


If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector, after following the above steps. Never connect ground wire to black or white power supply wires.

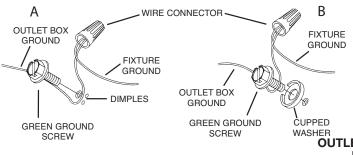


4) Make wire connections. Reference chart below for correct connections and wire accordingly.


| Connect Black or<br>Red Supply Wire to:                 | Connect<br>White Supply Wire to:                        |
|---|---|
| Black   | White   |
| *Parallel cord (round & smooth)                         | *Parallel cord (square & ridged)                        |
| Clear, Brown, Gold or Black<br>without tracer           | Clear, Brown, Gold or Black<br>with tracer              |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |

\*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



- Push the B-canopy to ceiling, carefully passing mounting screws through holes, rotate canopy and tighten mounting
- Insert recommended bulb (not included).
  Place glass up into canopy, insert and tighten the (3) C-thumb screws. (DO NOT over-tighten) Installation is now complete.

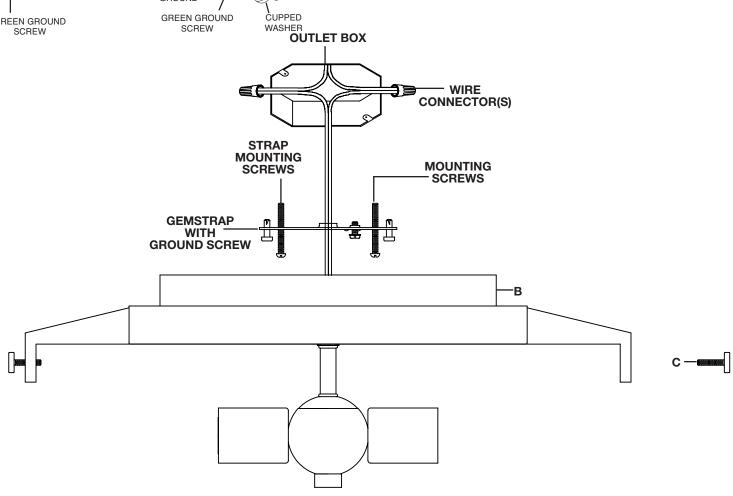

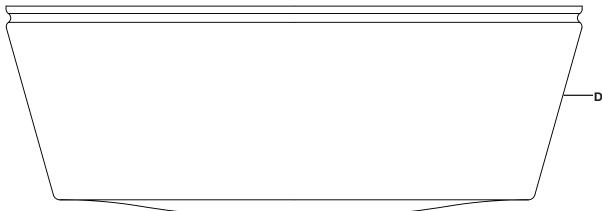

Date Issued: 06/21/16 IS-45299-US