


Assembly Instruction Sheet #IS-BRX1611C For Style BRX1611C

Please go to www.guoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (4) G9 Xenon Clear Bulbs (supplied), 40 W Maximum Estimated Assembly Time: 30-45 minutes Preparation: Identify and inspectal parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. A Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result. Do not touch the bulb with bare hands use a cloth or glove. (Step 2 Continued) Package Contents White wire White wire from supply from fixture М Black wire Black wire from Fixture Body from fixture supply (or Red) F M x 1 Ground wire Ground wire Figure 2 Ŀ G9 Xenon Clear Bulb from supply from fixture G Crossbar 0 x 4 А x 1 STEP 3 - Attach Ceiling Canopy to Mounting Screw (X ₿ Clear Crystal Wall Anchor B ¢ H L:4-3/8" A. Remove Protective Film from Ceiling Canopy. x 2 Note: Gloves are required to avoid leaving fingerprints or scratches x 16 *** on Ceiling Canopy. Self-tapping Screw Clear Crystal Mounting С B. Place the Ceiling x 2 L:5-7/8" Screw Canopy on the Fixture Flat Washer x 8 Body (F) over the D F x 2 Clear Crystal Mounting Screws and Mounting Ball L:6-3/4" secure with Mounting min. x 2 x 1 Balls (E). Hand tighten F until snug. Figure 3 Protective Film STEP 1 - Attach Crossbar Assembly to Outlet Box A. Place the Crossbar Assembly (A) onto the Ceiling surface and line STEP 4 - Install Bulb up one set of holes onto mounting holes on Outlet Box. Using a pencil, mark the locations for Wall Anchors (B). A. This fixture uses G9 Xenon Clear Bulbs (G). Maximum 40 watts. B. Remove the Crossbar Assembly (A) and drill holes from the marks Insert bulb and seat properly into and then push the Wall Anchors (B) into the holes. place. ///// C. Position the Crossbar Ceiling Socket Assembly (A) back onto the **IMPORTANT:** Do not touch the Outlet Box Ceiling. Thread the Outlet bulb with bare hands use a cloth Box Screws (not supplied) or glove. G В Figure 4 into the mounting holes on the Outlet Box to secure it. **STEP 5 - Install Crystal to Fixture** Hand tighten until snug. Α D. Pass Flat Washers (D) over A. (Refer to Crystal Distribution) Attach Clear Crystal L6-3/4" (J) to Self-tapping screws (C) and D the location "C" on the Ceiling Canopy. Attach Clear Crystal L5-7/8" then thread self-tapping С (I) to locations "B" on the Ceiling Canopy. Attach Clear Crystal L4screws (C) into Wall **Outlet Box Screw** Anchors (B). Hand tighten 3/8" (H) to locations "A" on the Ceiling Canopy. Figure 1 (not included) until snug. Your fixture is В **STEP 2 - Wire Connections** now assembled and ready to • B ٠C Βo A. Use standard wire connectors (not included) to make all wire use. Enjoy! connections. (Connectors are not included with fixture.) Twist B Bo connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box. Figure 5 **Crystal Distribution** Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com July2015 © 2015 Quoizel Inc.

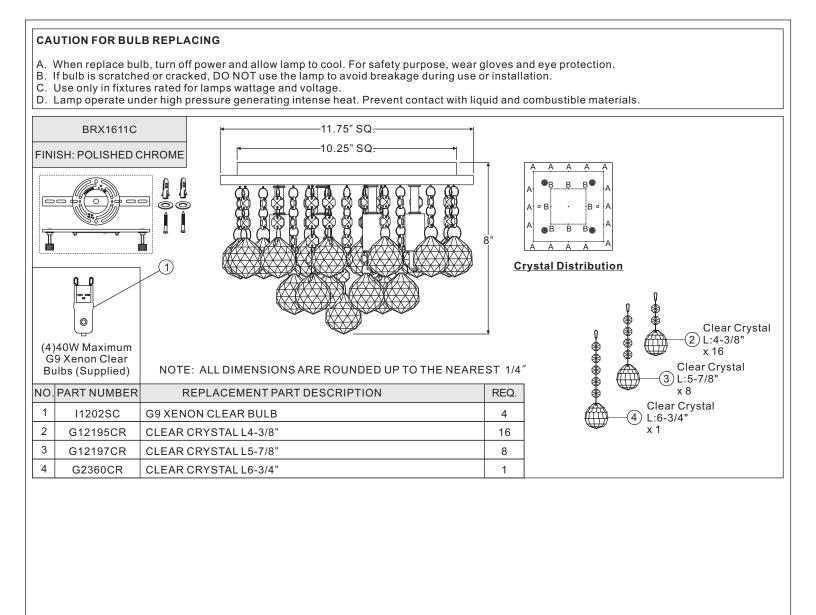

July2015