


Assembly Instruction Sheet #IS-MBH1613K For Style MBH1613K

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (2) A19 Medium Base Bulbs 60W Maximum or (2) Medium Base Vintage Bulbs are recommended but not supplied. Estimated Assembly Time: 30-45 minutes Preparation: Identify and inspectal parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. A Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Package Contents (Step 1 Continued) ceiling when held in place by the mounting ball. D. Remove the mounting ball and the Fixture Body (C). Tighten the lock washer and the hex nut against the crossbar to secure in place. Fixture Body С x 1 **STEP 2 - Wire Connections** A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw. B. Use standard wire connectors (not included) to make all wire Glass Shade D connections. Twist connectors until wires are tightly joined together. x 1 Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box. Crossbar Α Assembly White wire x 1 White wire from outlet box from fixture Black wire Tab Black wire from В x 3 outlet box (or Red) from fixture Cage Е x 1 Bare, or Green Ground wire Ground wire from Fixture STEP 1 - Install the Crossbar Assembly to Outlet Box and Adjust from outlet box the length of the Nipple Green Ground Screw Figure 2 A. Attach the Crossbar Assembly (A) to the Outlet Box with the head of on the Crossbar the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included), tighten until snug. STEP 3 - Install Fixture Body B. Remove the mounting ball from the Crossbar Assembly (A). Adjust the hex nut and lock washer underside of the crossbar to the middle A. Place the Fixture Body (C) over the end of the nipple and secure with of the nipple. previously removed mounting ball. Hand tighten until snug. C. Place the ceiling canopy and the Fixture Body (C) over the nipple against the ceiling to determine the correct position of the nipple. Thread the mounting ball back onto the nipple. Adjust the nipple to Outlet Box allow the ceiling canopy and the Fixture Body (C) to rest against the **Outlet Box** Nipple Green Ground Screw А **Outlet Box Screw** Hex Nut and (not included) Lock Washer C Mounting Ball Figure 1 Figure 3 Mounting Ball Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com Released Date: 2017-09-28 © 2017 Quoizel Inc.

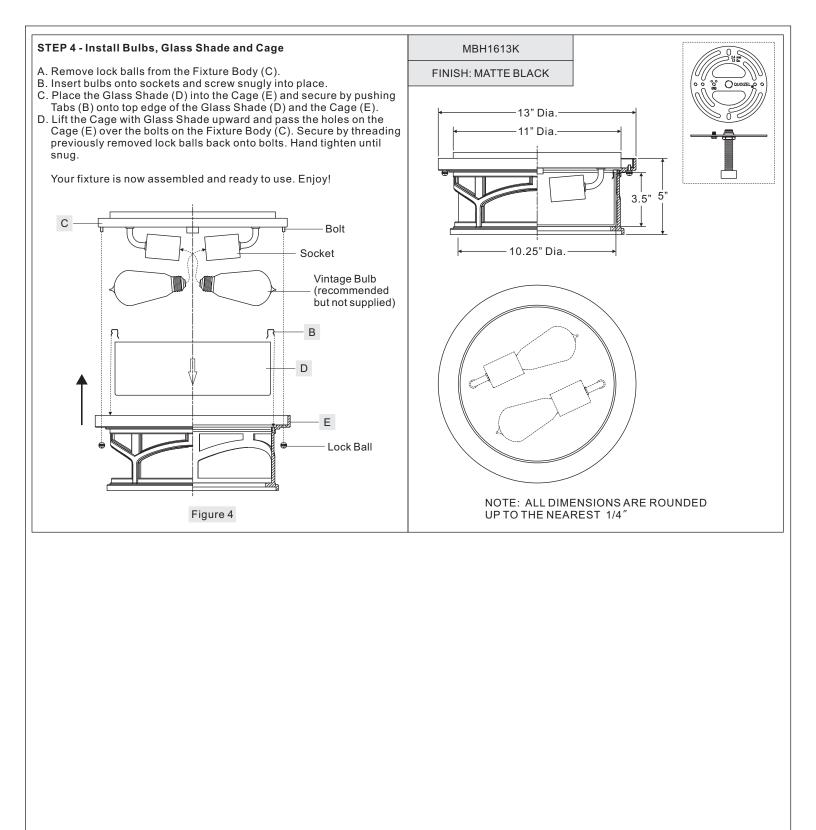

© 2017 Quoizel Inc.

Released Date: 2017-09-28