Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. guoizel. com

Assembly Instruction Sheet #IS-PCCN2818PK For Style PCCN2818PK

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (4) Candelabra Base 60W Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


 $Note: This \, CONVERTIBLE \, fix ture \, can \, be \, mounted \, as \, pendant \, light \, or \, semi-flush \, light. \, Refer to \, respective \, installation \, steps \, for \, installations.$

△ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

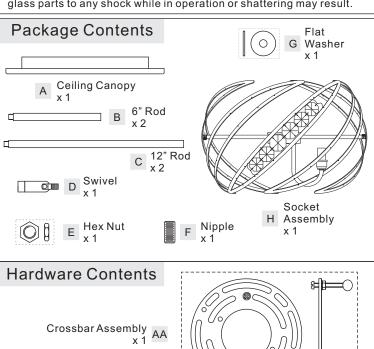

Assembly Instructions for Pendant Light (Step 1A - Step 7A)

STEP 1A - Attach Swivel and Ceiling Canopy together

- A. Thread Nipple (F) onto the Swivel (D).
- B. Place Ceiling Canopy (A) and Flat Washer (G) over the Nipple (F), secure by threading Hex Nut (E) onto the Nipple (F), tighten until sung.




STEP 2A - Install Ceiling Canopy, Rods and Socket Assembly together

A. Determine the Rods (B/C) to be assembled to the Socket Assembly

- (H) according to your hanging height.
- nanging neight.

 B. Pass the supply wires and ground wire through the chosen rods (B/C) and the Ceiling Canopy (A). Thread the Socket Assembly (H), the chosen Rods (B/C) and the Ceiling Canopy (A) together. Hand tighten until snug.

Suggested rods for Ceiling height: 8' ceiling: use (2) 12" rods 9' ceiling: use (2) 6" rods and (2) 12" rods

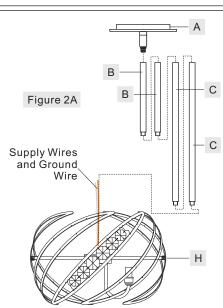

STEP 3A - Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Figure 3A

Outlet Box Screws (not included)

Supply Wires with Ground Wire

Outlet Box


STEP 4A - Fit Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (AA). Fit the Ceiling Canopy (A) to the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and the mounting balls. If Not, adjust the length of the nipple on the Crossbar Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove the mounting ball and Ceiling Canopy (A) and proceed to Step 5A.

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

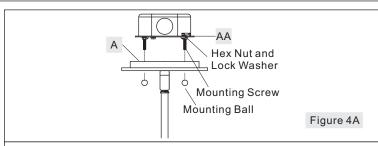

STEP 5A - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



STEP 6A - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy (A) over the outlet box. Align the holes in the Ceiling Canopy (A) with the mounting screws, then attach the Ceiling Canopy (A) using the previously removed mounting balls. Hand tighten until snug.


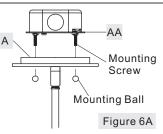


Figure 5A

STEP 7A - Install Bulbs

A. This fixture uses candelabra bulb with standard screw base. Maximum 60 watts. Insert bulb and screw snugly into place.


Your fixture is now assembled and ready to use. Enjoy!

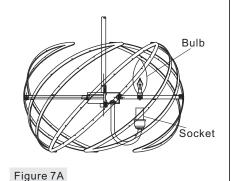

(Step 1B Continued)

Figure 1B


then attach Nipple (F) and the Ceiling Canopy (A) to the Swivel using The Flat Washer (G) and the Hex Nut (E) as in step A.

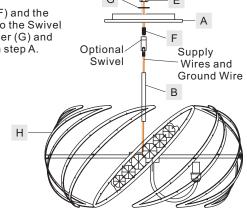

STEP 2B - Install Crossbar Assembly


A. Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Figure 2B Outlet Box Screws (not included)




STEP 3B - Fit Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (AA). Fit the Ceiling Canopy (A) to the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and the mounting balls. If Not, adjust the length of the nipple on the Crossbar Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove the mounting ball and Ceiling Canopy

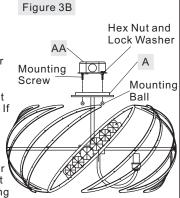

Assembly Instructions for Semi-flush Light (Step 1B - Step 6B)

Part B, Part C and Part E will not be used in the assembly of the Semi-Flush Light fixture. Please set aside these parts.



STEP 1B - Install Rod and Ceiling Canopy to Socket Assembly


A. Pass supply wires with ground wire through 6" Rod (B) Nipple (F), Ceiling Canopy (A), Flat Washer (G) and Hex Nut (E). Thread Nipple (F) onto the Socket Assembly (H). Place the Ceiling Canopy (A) and the Flat Washer (G) onto the Nipple (F). Secure by threading the Hex Nut (E) onto the Nipple (F). Hand tighten until snug. Cut the wires leaving approximately 6" of wire extending from the Ceiling Canopy.

B. Optional Swivel: Install the swivel to the Socket Assembly (H) and

STEP 4B - Wire Connections

(A) and proceed to Step 4B.

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



STEP 5B - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy (A) over the outlet box. Align the holes in the Ceiling Canopy (A) with the mounting screws, then attach the Ceiling Canopy (A)


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

© 2016 Quoizel Inc.

Released Date: 2016-04-20

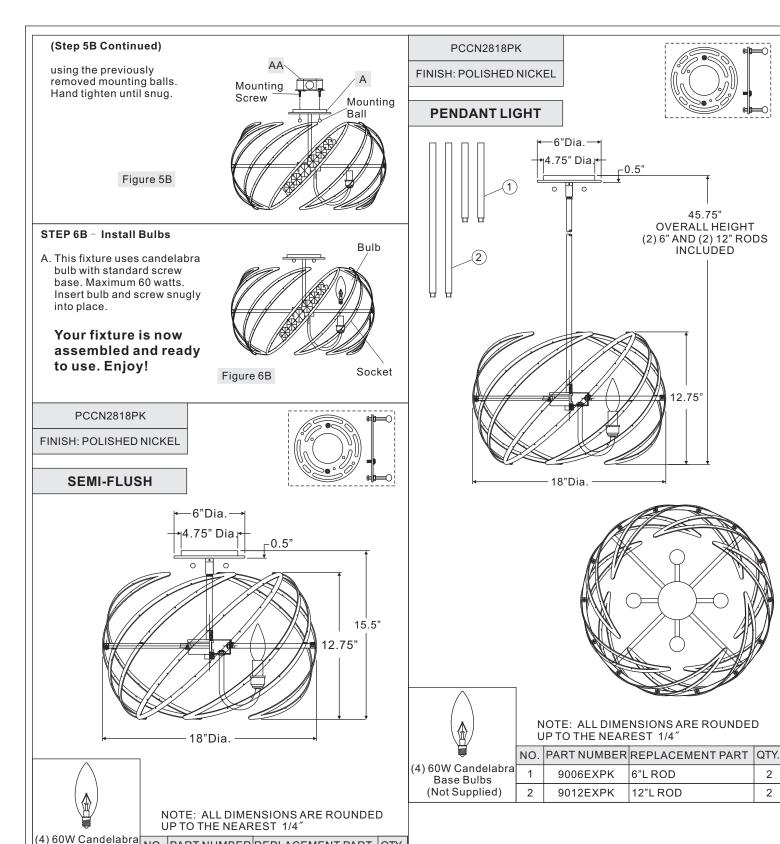

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

NO. PART NUMBER REPLACEMENT PART QTY.

Base Bulbs (Not Supplied)