

# Assembly Instruction Sheet #IS-WHP1712MC For Style WHP1712MC

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

LightSource: (3)B10CandelabraBase60WMaximum

Estimated Assembly Time: 30-45 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

### **△** Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Outlet

Box

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

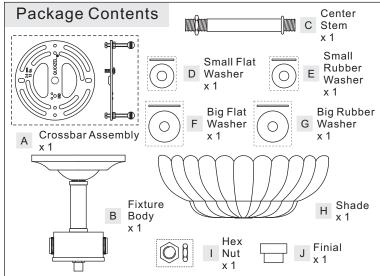


### STEP 1 - Install Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.



## STEP 2 - Fit Ceiling Canopy to Crossbar Assembly


A. Remove mounting balls from the Crossbar Assembly (A). Fit the Canopy (B) to the Crossbar Assembly (A) and secure with mounting balls. Note: The Canopy (B) should be snug against the ceiling and the mounting balls. If not, adjust the length of the nipple on the

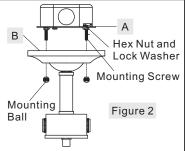

Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Canopy (B) is secure, remove the mounting ball and ceiling canopy and proceed to Step 3.


#### **STEP 3 - Wire Connections**

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist Connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



### STEP 4 - Install Fixture to Ceiling

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy of the Fixture Body (B) over the outlet box. Align the holes in the Ceiling Canopy with the mounting screws. Secure the Ceiling Canopy with Mounting Balls. Hand tighten until snug.

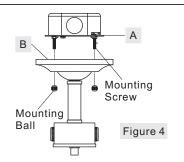


### STEP 5 - Install Shade

A. Thread the beaded end of Center Stem (C) onto the Coupling on the bottom of Fixture Body (B) and hand tighten until sung.

B. Adjust the hex nut on the bottom end of the Center Stem (C) to proper location for rest components. Place Big Flat Washer (F), Big Rubber Washer (G), Shade (H), Small Rubber Washer (E) and Small Flat Washer (D) over the bottom end of the Center Stem(C) as shown. Secure them with the Hex Nut (I) and tighten until

C. Thread Finial (J) onto the Center Stem (C) and hand tighten until sung.

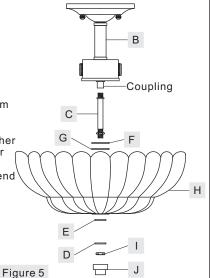

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2016 Quoizel Inc.


January 2016

### STEP 6 - Install Bulb

- A. This fixture uses candelabra bulb with standard screw base. Maximum 60 watts.


  B. Insert bulb and screw snugly into place.


Your fixture is now assembled and ready to use. Enjoy!

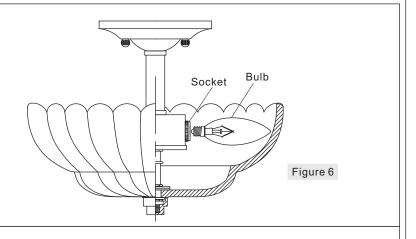

### WHP1712MC

### FINISH: MOTTLED COCOA

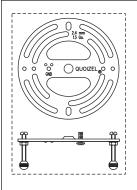

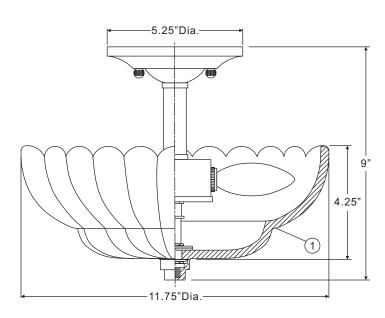



NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Base Bulbs (Not Supplied)

(3) 60W Candelabra NO. PART NUMBER REPLACEMENT PART REQ. G12663SH SHADE

> Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com